

1. PRODUCT NAME


Health Design Wall Base & Corners

2. COMPANY INFORMATION

Flexco Corporation
 1401 East 6th Street
 Tuscumbia, AL, USA 35674
 Phone: (800) 633-3151
 Fax: (800) 346-9075
 Email: info@flexcofloors.com, technical@flexcofloors.com
 Internet: www.flexcofloors.com


3. PRODUCT DESCRIPTION

ASTM F 1861, Type TP, Group 1, Style C
 Thermoplastic Rubber Formulation designed to meet or exceed the above-mentioned standard specification for Resilient Wall Base.

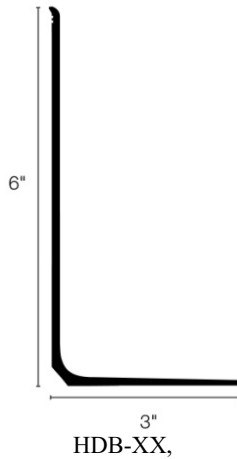

Available in 72” Lengths

Color Sample:

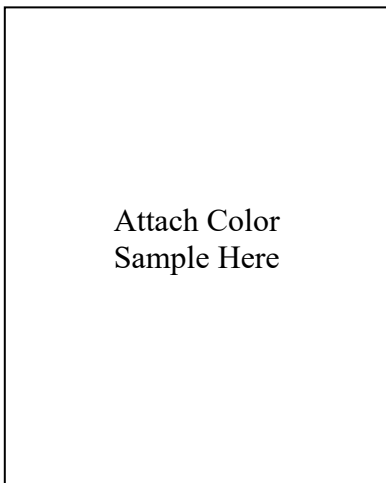

4. TECHNICAL DATA

ASTM E 648 (NFPA 253) - Class 1
ASTM E 662 (NFPA 258) - Passes
ASTM F 1861- Meets or exceeds the requirements to conform to this ASTM Standard

5. SUSTAINABILITY INFORMATION

Material contains a FloorScore Certificate and is Recyclable through the IMPACT program with Flexco

6. INSTALLATION

Maintain the installation area, coving, corners, and adhesive between 65° F and 85° F for at least 48 hours before installation, during installation, and after the installation. Use only on structurally sound interior wall surfaces such as dry plaster, cured drywall, exterior grade plywood, concrete and masonry that are clean, smooth, dry and structurally sound. All surfaces must be free from moisture, alkali, old adhesive, dust dirt, wax, oil, grease, loose paint or plaster, nonporous wall coverings or paints and other extraneous coatings or materials that could prevent a successful bond. Any rough or uneven surfaces may telegraph through the wall base. Refer to Vinyl Wall Base Installation instructions for detailed information.

7. ADHESIVES

Adhesive for Porous Substrates

Excelsior WB-600 Wall Base Adhesive is a premium solvent free, high performance acrylic wet set adhesive designed for the permanent installation of Roppe Wall Base products. Coverages are described on the Excelsior WB-600 Wall Base Adhesive data sheet.

Adhesive for Non-Porous Substrates

Excelsior C-630 is a VOC free water based contact cement for wall base installations over all non-porous substrates such as metal, FRP panels, etc.

8. PRODUCT MAINTENANCE

Refer to Flexco Health Design Wall Base Maintenance Information for detailed instructions

9. AVAILABILITY AND COST

Products are available through Flexco distributors. Contact Flexco Customer Service or visit www.flexcofloors.com for a list of distributors.

10. LIMITED WARRANTY

Limited Two (2) Year Manufacturer’s Warranty

Refer to Health Design Wall Base Installation and Maintenance documentation for any additional detailed information.

